

MANUAL MINI-CROSS BICOOL 48

Foreword


1. This software only works when there is a Master in the working line, before start to use the software, please make sure at least 1 mini cx at working state, and then please connect the USB radio emitter to your computer.
2. The software will turn into demo mode when enter serial number with 88-888-8888 for Master, BC-888-888 for annexe, all the operations to the display will be invalid under demo mode.

Steps

- 1. First time to start the software, you will see a window like below: which appears just when you first time to register serial number.**

Note for No.1


Please enter serial number for the Master display before click OK, in order to establish communication between software and BC MINI CX 48. When you finish this step, you will see next window like below

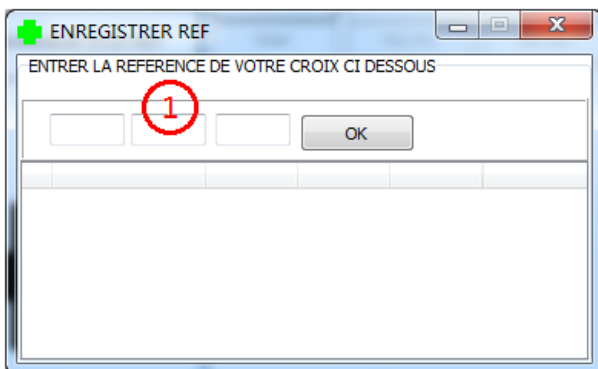

Note for No.2

- ✓ : serial number registered successfully
- ↻ : refresh
- ✖ : remove serial number

PS: You can register more than 1 serial number.

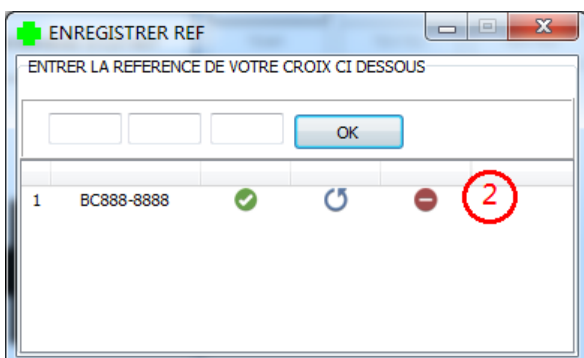

2. Main interface for software:

Note for No.3


From the top down: Create a new program,
Open an existed program

Note for No.4

To add new animation



Note for No.5

Send program
Animation preview

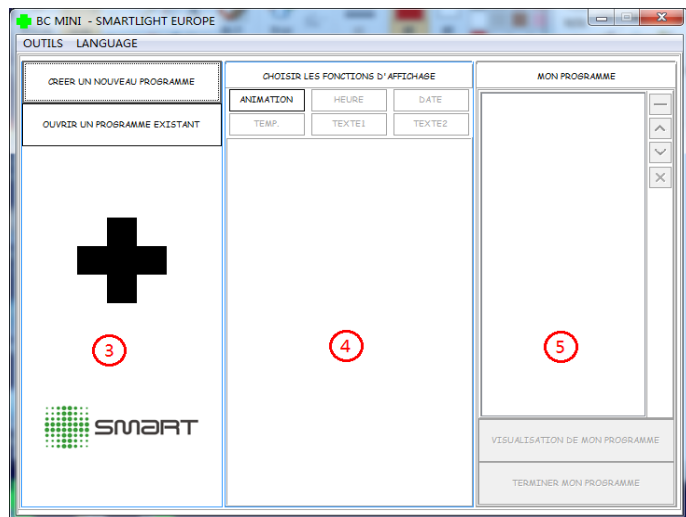

3. Steps for creating a new program


Click No. 6 as below---> choose right serial number from No.7---> OK.

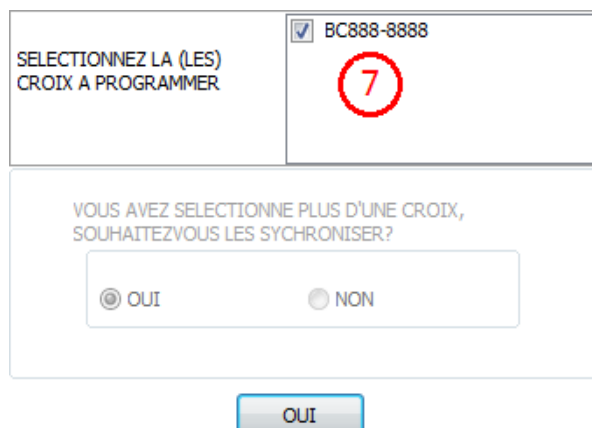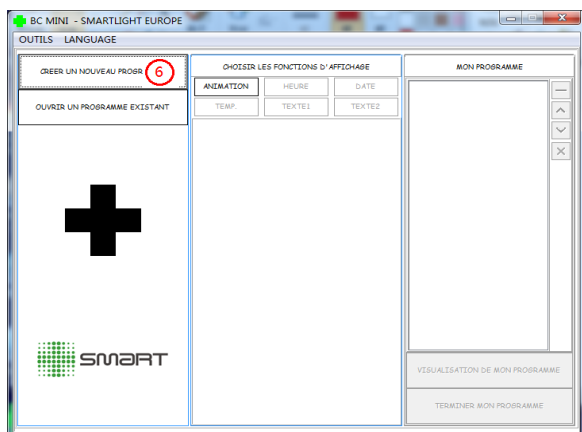

You'll see below window when you choose more than 1 serial numbers:


Note for No.8

You can choose OUI or NON for Master Synchronization function (the first serial number is regarded as Master by default)

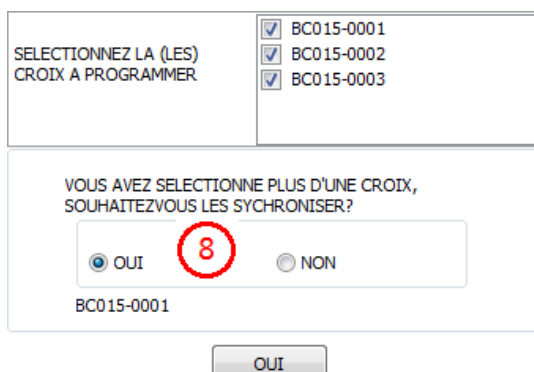

Note for No.9

You can choose the animations according to what you want to display.

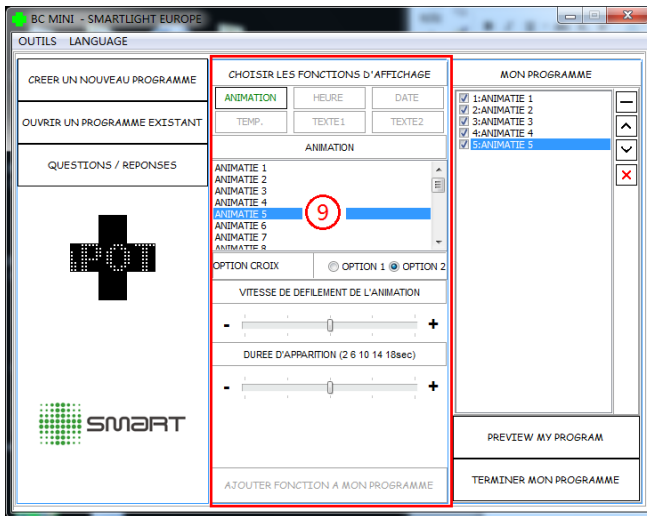


Note for No.10

You can choose maximum for 7 animations.

Note for No.11

You can set color, speed, stop time for each animation you have chosen.

At last, please click No.12

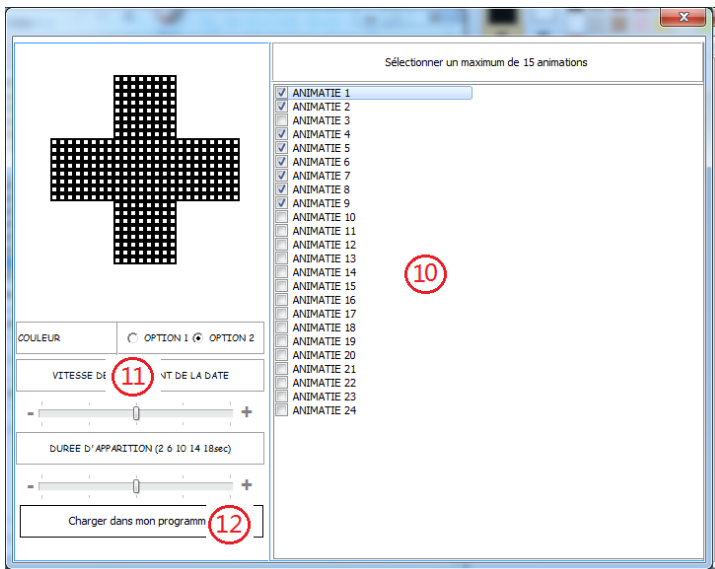

4. After you back to the main interface:

Note for No.13

from top down:

Remove a program

Move up a program

Move down a program


Remove all the program

Note for No.14

Preview for program


Note for No.15

Send program

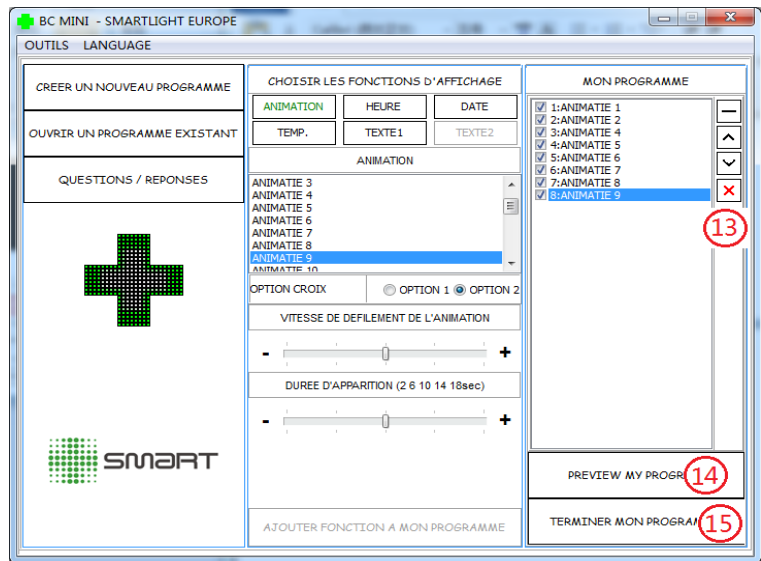

Note for No.16

To adjust luminosity.

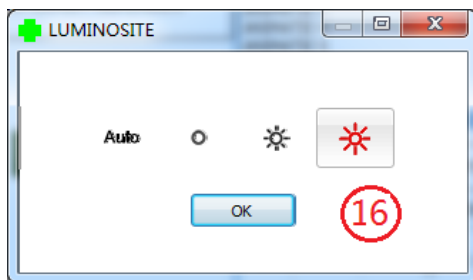

5. Steps for opening an existed program

Click No. 17 as below--->choose right serial number--->open the program which you've already saved.

